



# PNEUMATIC SCREWDRIVER

# KE-65TC



No.	Part No.	Part Name	Q'ty	No.	Part No.	Part Name	Q'ty
1	65-01	Pistol Cover (Red)	1	40	47-39	Ball	4
2	65-02	Blank Cap	1	41	65-41	End Clutch	1
2-1	47-021	O Ring	1	42	47-11	Ball	25
2-2	47-022	Screw	1	43	65-43	Ball Race	1
3	47-03	O Ring	1	44	65-44	C Ring	1
4	47-04	Valve O-Ring	1	45	65-45	Anvil	1
5	47-05	Valve Pin	1	45-1	47-441	Regulate Screw	1
6	47-06	Cone Spring	1	46	47-45	Ball	2
7	47-07	Valve Bushing	1	47	65-47	Spring	1
7-1	47-071	O-Ring	2	48	65-48	Slide Base	1
8	47-08	Cap (Black)	2	49	65-49	Torque Spring	1
9	47-09	Button (Black)	1	50	65-50	Washer	1
10	47-10	Valve O-Ring	1	51	65-51	Bushing	1
11	65-11	Valve	1	53	65-53	Clutch Housing	1
11-1	65-111	Spring	1	53-1	47-521	O Ring	1
12	47-12	Set Screw And Washer	1	54	47-53	Needle Pin	3
13	65-13	Switch	1	56	65-56	Torque Ring	1
14	606ZZ	Ball Bearing	1	57	65-57	Ball	1
15	65-15	End Plate	1	58	65-58	Spring	1
16	65-16	Cylinder	1	58-1	65-581	Bushing	1
16-1	65-161	Key	1	59	65-59	Bit Slide Sleeve	1
17	47-17	6T Rotor	1	60	65-60	C Ring	1
18	65-18	Blade	6	61	65-61	Housing Cap	1
19	65-19	Front Plate	1	62	65-62	Torque Cover (Black)	1
20	688Z	Ball Bearing	1	63	65-63	Operating Rod	1
22	65-22	18T Main Gear	1	64	65-64	O Ring	1
23	65-23	12T Plate Gear	4	65	65-65	Valve Plate	1
24	65-24	Third Gear Cage	1	66	65-66	Cone Spring	1
25	65-25	18T Main Gear	1	67	47-66	O Ring	1
26	65-26	12T Plant Gear	4	68	47-67	Screw Cap	1
27	65-27	Third Gear Cage	1	69	47-68	O Ring	1
28	65-28	14T Main Gear	1	70	47-69	Screw Cap	1
29	65-29	14T Plant Gear	4	71	47-70	Silencer	1
30	65-30	Fourth Gear Cage	1	72	65-72	Pistol Cover (Black)	1
31	65-31	Internal Gear	1	73	47-72	O Ring	1
32	65-32	Front Housing	1	74	47-73	Air Inlet Bushing [PT]	1
33	6001ZZ	Ball Bearing	1	74	65-75	Air Inlet Bushing [PS]	1
34	65-34	Retainer	1	74	65-76	Air Inlet Bushing [NPT]	1
35	47-34	Ball	32	75	47-76	Silencer for pistol	1
36	65-36	Pilot Pin	1	76	47-77	Spring	1
37	65-37	Rear Clutch	1	77	47-78	Screw	1
38	47-37	C Ring	1	78	47-39	Ball	2
39	65-39	Center Clutch	1	79	65-41	Screw	1